


Tip:  
Drill 1/8" pilot hole, then use a "paddle bit" to drill the larger hole. Drill half way through from the front then finish from the back to prevent tear-out.

1" DIA

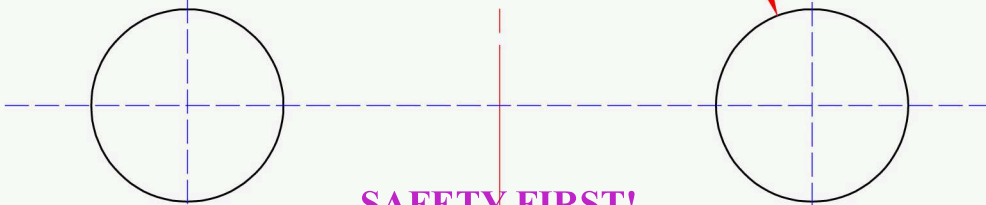

**SAFETY FIRST!**  
Fiberglass is nasty stuff! Wear a dust mask when drilling and cutting fiberglass.

<----- Cut for Bezel Opening ----->

## CHEST HOLE TEMPLATE FOR TIMK TORSO

by Craig Reinbrecht

Tip:  
Cut using sabre saw with a "grit" blade". Clean up the cut with a large file

11"  
16" DIA

